



ZTE Speed Earpiece Speaker Replacement

As a phone the earpiece speaker is essential to the use of hearing someone/something on the phone.

Written By: Garrett Barry




INTRODUCTION

The earpiece speaker is used for all aspects involving sound from the phone

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Motherboard

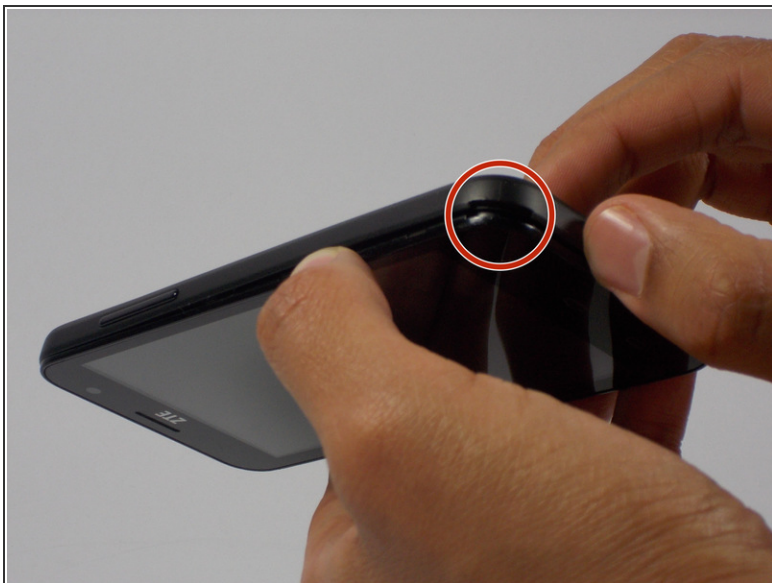


- Pull off back cover at bottom right corner.

Step 2



- Remove the seven 3.175mm Phillips head screws from the inner back located at the top, upper-middle-right, middle-right, lower-right, and bottom.

Step 3

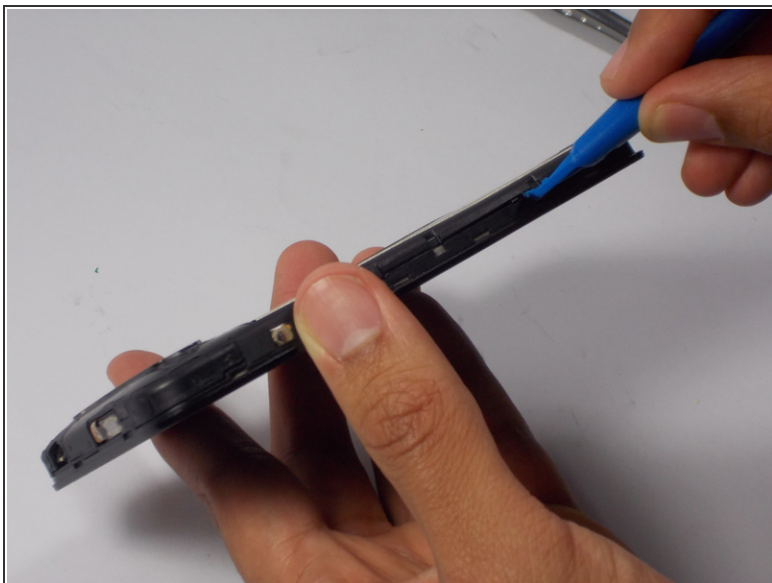


- With the plastic opening tool the spudger, gently pry off the inner back.
- Be careful not to pry it off too hard, as it is just a plastic covering.

Step 4




- Remove the one 2.381mm Phillips head screw from the motherboard located in the upper-middle part of the phone next to the bottom left corner of the back camera.

Step 5

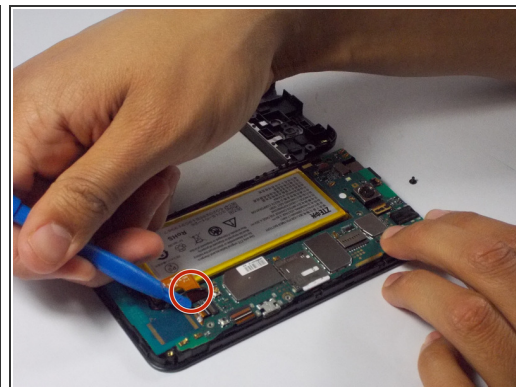



- Using the spudger, gently pry up all ZIF connectors
- ZIF connectors have a tiny tab that needs to be flipped up in order to safely remove the cable
- Using same spudger, gently pry up the orange flat top connector

Step 6

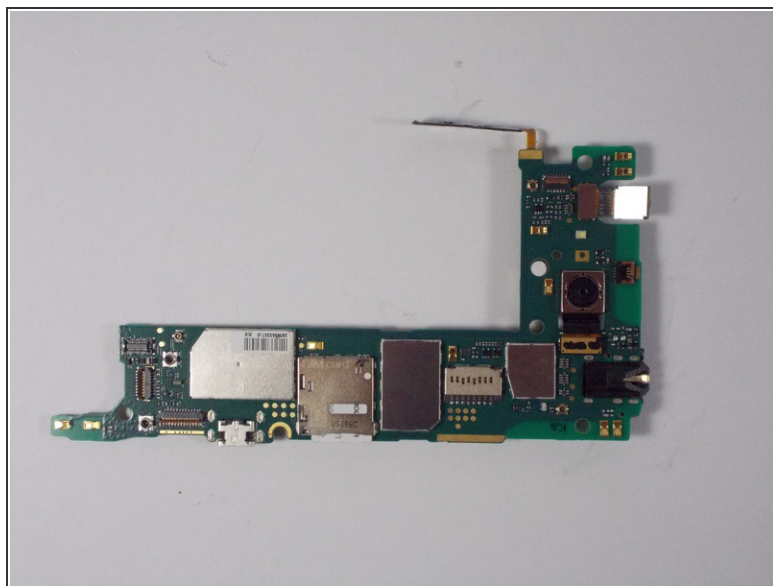

- Carefully take off motherboard.

Step 7 — Earpiece Speaker

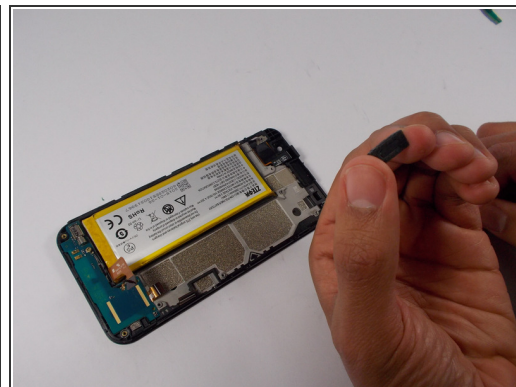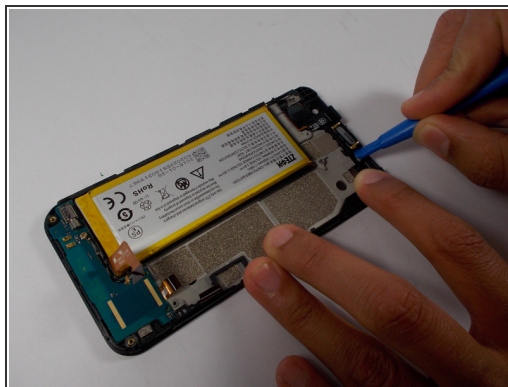

- The earpiece speaker is located at the top-middle of the phone.
- Using the plastic opening tool, carefully press into side of earpiece speaker and push up.
- You will then be able to grab the speaker with your fingers and remove it.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-14 11:40:19 PM.